

REMINGTON®



Official Electrical Styling Partner of Manchester United





Style Series Foil Shaver F4005

 remington-europe.com


Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

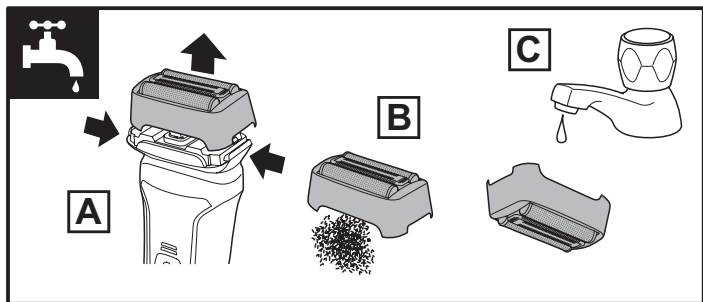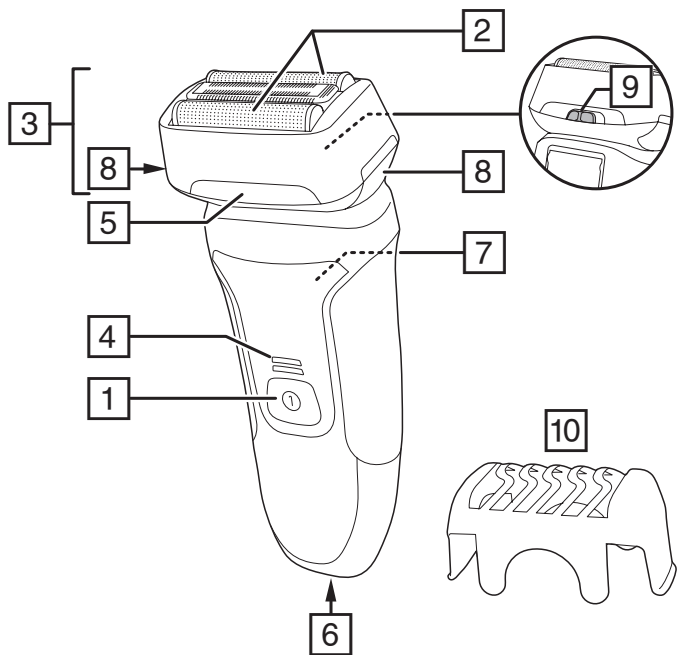

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.
- The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
-  Suitable for use in a bath or shower.
- **WARNING:** Detach the device from the charging adapter before cleaning it in water.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- **WARNING:** For recharging the battery, only use the charger supplied with the appliance - type reference PA-0505K (UK).
- Always replace a damaged adaptor with one of the original type.
- Do not use the appliance if it is damaged or malfunctions.
- Do not use attachments other than those we supply.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

PARTS

1. On/off switch
2. Foil screens
3. Cutter assembly
4. Charging indicator lights
5. Hairpocket
6. Power port
7. Pop-up trimmer
8. Head release buttons
9. Head lock button
10. Stubble head guard

Not shown:

- Adaptor
- Cleaning brush
- Face towel

GETTING STARTED

CHARGING YOUR APPLIANCE

- It is recommended to fully charge your appliance before using it for the first time.
- Ensure the product is switched off.
- The adaptor automatically adjusts to a main voltage between 100V and 240V.
- Connect the shaver to the adaptor and then to the mains.

CHARGING INDICATOR LIGHTS

Charge Level	Lights
Charging	The lights will come on one after the other then go off in a repeating pattern.
Fully Charged	Both lights will come on for 5 minutes then go out.
Low charge/charging required	The bottom light will flash rapidly.
Battery capacity 50% or higher	Both lights will come on.
Battery capacity 50% or lower	The bottom light will come on.

- Run time from fully charged is up to 45 mins.
- Charge time from empty is 4 hours.
- Note: To preserve the life of your batteries, let them run out every 6 months then fully charge.

INSTRUCTIONS FOR USE

It is recommended that you use your new shaver daily for up to two weeks to allow time for your beard and skin to become accustomed to the new shaving system.

- Make sure your shaver is properly charged.
- Switch the shaver on by pressing the on/off switch.

SHAVING

- Stretch the skin with your free hand so the hairs stand upright.
- Hold the shaving head so that the foils touch your face.
- Use short linear strokes.

TRIMMING

- Slide up the trimmer release button to activate the trimmer.
- Hold the trimmer at a right angle to your skin.
- To retract the trimmer, push the top rear of the trimmer down until it locks under the trimmer release button.

STUBBLE LOOK

Fit the stubble head guard to your shaver for a 3-day stubble look.

HEAD LOCK

Normally, the head pivots freely but its movement can be restricted by sliding the head lock button to the locked  position.

TIPS FOR BEST RESULTS

- Always hold the shaver at right angles to the skin so that all foils are touching the skin with equal pressure.
- Use moderate to slow stroking movements. The use of short linear motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- DO NOT press hard against the skin in order to avoid irritation and damage to the foil heads.

CLEANING AND MAINTENANCE

- To ensure long lasting performance clean after each use.
- Ensure the appliance is switched off and unplugged from the mains.
- The easiest and most hygienic way to clean the appliance is by rinsing the appliance head after use with warm water.

DRY CLEANING

- Press the head release buttons and pull the head upwards.
- Gently tap out the excess hair shavings and use a cleaning brush to clean out the hair pocket if necessary.

- Note: Do not use a brush to clean the shaving foils.
- Replace the head assembly.

WASHABLE CLEANING

- Press the head release buttons and pull the head upwards.
- Do not use the brush to clean the foils but blow the shavings out or rinse in running water.
- Use the cleaning brush to sweep any loose hairs from the cutter and trimmer. Rinse in running water.
- Replace the head assembly.
- Lubricate the teeth of the trimmer every six weeks with a drop of sewing machine oil.

REPLACING THE FOILS AND CUTTERS

- To ensure continued high quality performance from your shaver, we recommend the foils and cutters are replaced regularly.

Signs that your foil/s and cutter/s need replacing:

- Irritation: as foils get worn, you may experience skin irritation.
- Pulling: as the cutters wear, your shave may not feel as close and you may feel the cutter pulling your hair.
- Wear through: you may notice that the cutters have worn through the foils.

TO REPLACE THE FOIL/CUTTERS

- Press the head release buttons and pull the head upwards.
- Fit the new head assembly over the hair pocket and press down to click into place.

BATTERY REMOVAL

- The battery must be removed from the appliance before it is scrapped.
 - The appliance must be disconnected from the supply mains when removing the battery.
1. Pry off the two decorative side panels.
 2. Unscrew one screw from the bottom of the shaver and remove the bottom panel.
 3. Remove the foil assembly and unscrew the 4 screws underneath it.
 4. Remove the two E-rings one on each side of the head then lift off the upper head assembly.
 5. Unscrew the 2 screws below the upper head assembly then lift the rest of the head off the body.
 6. Pry off the upper decorative panel to expose 2 screws. Remove the screws.
 7. Remove the front panel to expose 4 screws. Remove the 4 screws then remove the back housing.
 8. Lift out the battery and printed circuit board assembly.
 9. Disconnect the battery from the circuit board.
 10. Dispose of the battery safely.

ADAPTER SPECIFICATIONS

Manufacturer address and registration number	Spectrum Brands (UK) Limited, Regent Mill, Fir Street, Failsworth, Manchester M35 0HS Company number: 02394603
Adapter model number	PA-0505K
Input voltage	100 - 240 V~
Input AC Frequency	50/60Hz
Output voltage	5.0 V ===
Output current	0.5 A
Output power	2.5 W
Average active efficiency	≥73.16%
Efficiency at 10%	-
No load power consumption	≤0.1W

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.


Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

UNITED KINGDOM

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester


M35 0HS, UK

www.remington.co.uk

Product support:

productsupport@remington.co.uk

IRELAND

 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

<https://ie.remington-europe.com>

Product support:

productsupport@remington.co.uk

Ref. No. F4005

Type No. F09A

20/UK/ F4005 T22-7001664 Version 06 /20

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

remington-europe.com

© 2020 Spectrum Brands, Inc.